


FurnitureLeisure.com PoolFurnitureSupply.com
PicnicFurniture.com PicnicTableSupplier.com
ParkTables.com UBrace.com

1-800-213-2401 | sales@furniturelsiesure.com

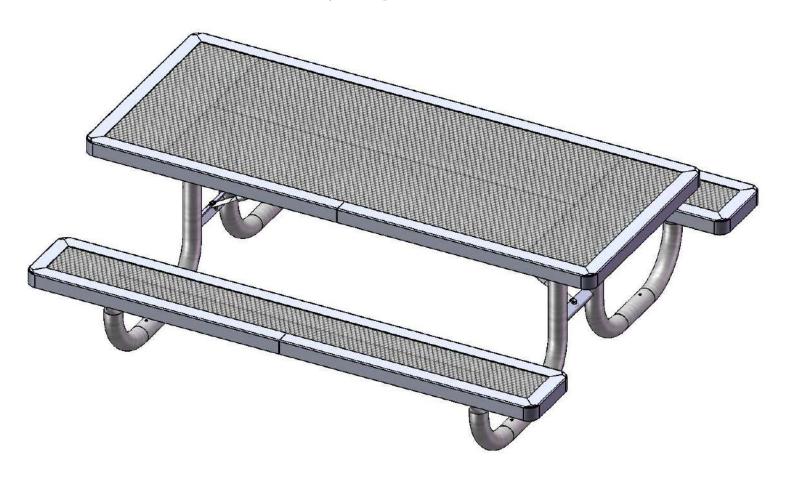

Model # T6RC-ELEM

1/13/2020 Page 1 of 8

# HARDWARE



5/16" x 1" Machine Bolt



5/16" Washer



5/16" Washer

1/13/2020 Page 2 of 8

#### PRODUCT SPECIFICATIONS

# T6RC-ELEM PRE-SCHOOL PORTABLE PICNIC TABLE WALK THROUGH DESIGN

Seat & Back: 2" x 2" x 1/8" formed angle frame with 1-1/2" radius corners. 3/4" #9 steel expanded metal. 7 gauge x 1-1/2" flat bar center support and mounting bracket understructure. Electrically MIG welded.

Coating: Oven fused functionalized polyethylene copolymer-based thermoplastic. Fluidized bed coating application with superior mechanical performance, impact resistance and UV-stability.

Frame: 2-3/8" O.D. x 12 gauge pre-galvanized structural steel tubing. Cross braces 1" O.D. x 16 gauge pre-galvanized structural steel tubing. Brace attachment points 1-1/2"x1-1/2"x3/16" steel angle. Seat and top mounting points 7 gauge x 1-1/2" die stamped steel flat bar. Legs are bent over a mandrel through the bend radius producing a wrinkle free bend. Holes are predrilled in legs for optional surface mounting. All electrically MIG welded.


Frame Coating: Electrostatic powder coated application oven cured.

Hardware: All stainless steel hardware fasteners.

Dimensions: 6' pre-school portable pincinc table walk-through design. Top is 30" wide x 72" long x 24-13/16" high. Seat is 10" wide x 72" long x 13-13/16" high. Outisde to outside dimensions are 61-1/8" x 72".

1/13/2020 Page 3 of 8


## COMPONENTS

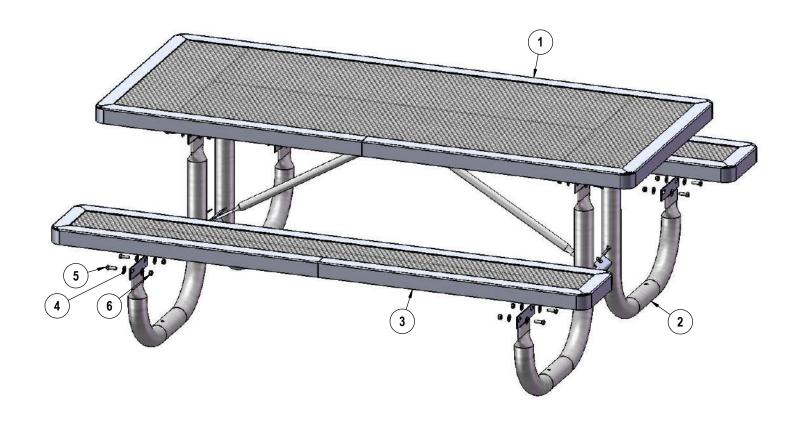

ITEM NO.	PartNo	DESCRIPTION	QTY
1	RC72-T	6' regal expanded top	1
2	04-01-0019	238 preschool vinyl frame	2
3	RC72-S	6' long x 10" wide regal expanded seat	2
4	33-02-0007	5/16" SS Washer	40
5	33-05-0029	5/16" x 1" Machine Bolt (SS)	20
6	33-03-0012	5/16" Kep Nut (SS)	20
7	04-01-0021	27 7/8" vinyl table brace	2

1/13/2020 Page 4 of 8


## STEP 1

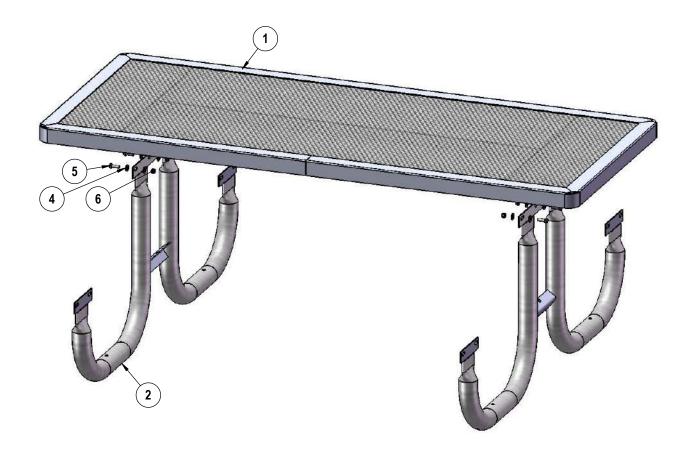

Attach the top to the top legs as shown using specified hardware.

1/13/2020 Page 5 of 8


#### STEP 2

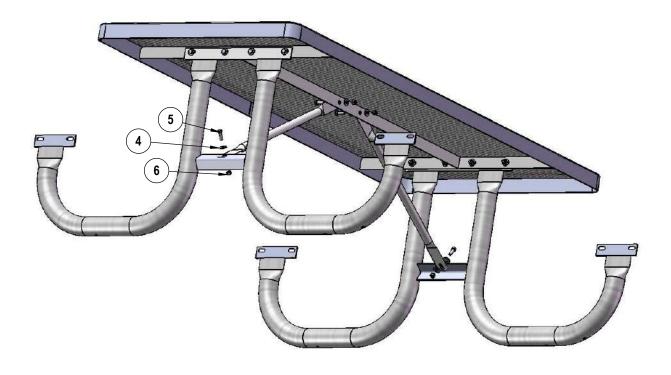

Attach the braces to the frame and under side of the top as shown using specified hardware.


1/13/2020 Page 6 of 8

#### STEP 3

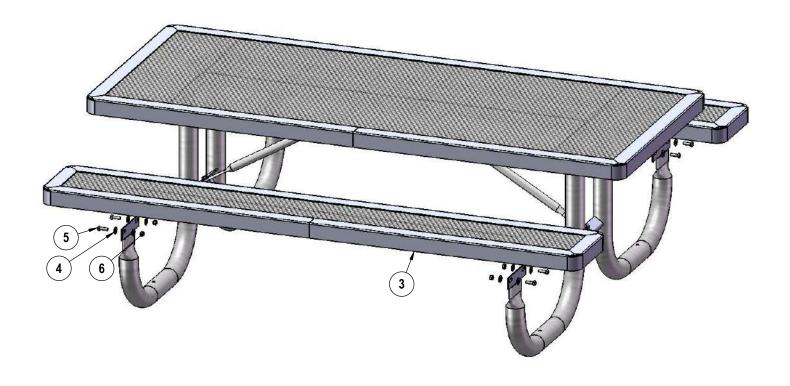

Attach the seats to the frame as shown using specified hardware.

1/13/2020 Page 7 of 8

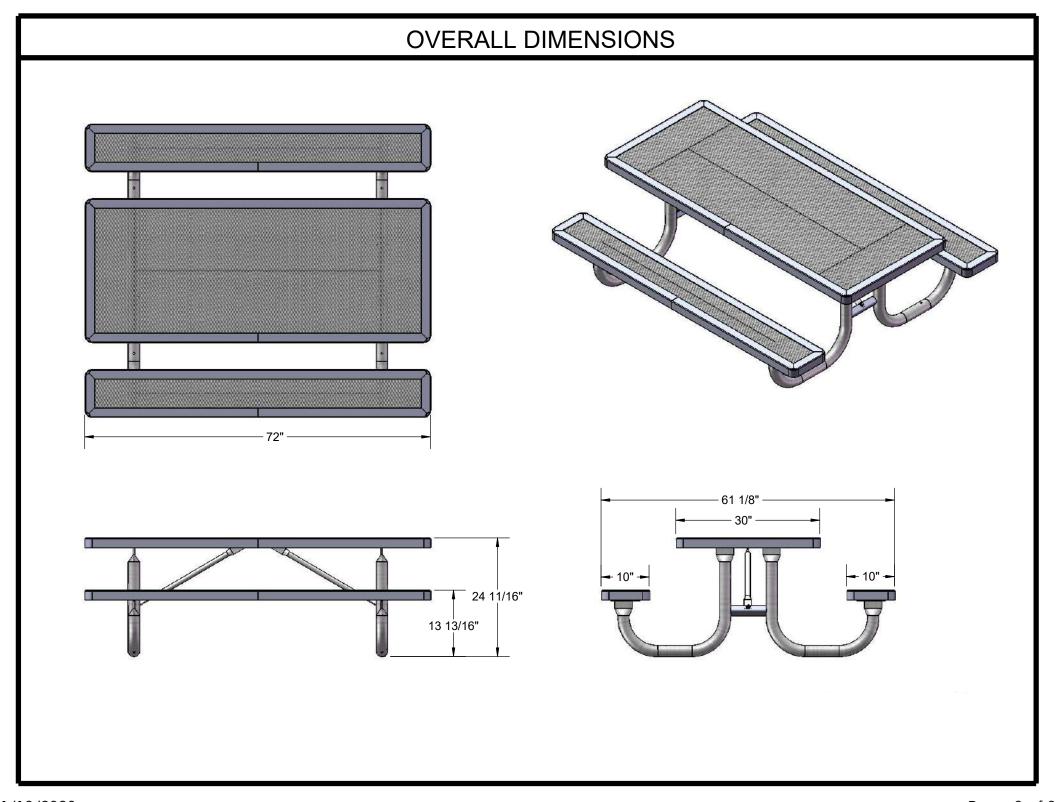

1/13/2020 Page 8 of 8