


PicnicFurniture.com ParkTables.com

FurnitureLeisure.com PoolFurnitureSupply.com PicnicTableSupplier.com UBrace.com

1-800-213-2401 | sales@furniturelsiesure.com

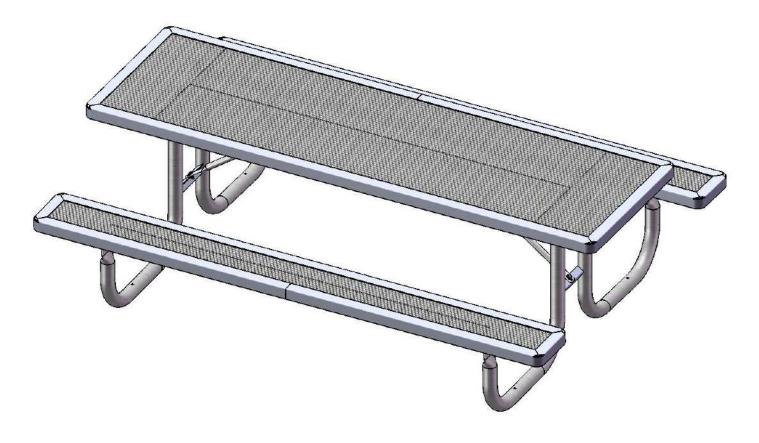

Model # T8RC

1/10/2020 Page 1 of 8

HARDWARE



5/16" x 1" Machine Bolt



5/16" Washer



5/16" Washer

1/10/2020 Page 2 of 8

PRODUCT SPECIFICATIONS

T8RC PORTABLE PICNIC TABLE WALK THROUGH DESIGN

Seat & Back: 2" x 2" x 1/8" formed angle frame with 1-1/2" radius corners. 3/4" #9 steel expanded metal. 7 gauge x 1-1/2" flat bar center support and mounting bracket understructure. Electrically MIG welded.

Coating: Oven fused functionalized polyethylene copolymer-based thermoplastic. Fluidized bed coating application with superior mechanical performance, impact resistance and UV-stability.


Frame: 2-3/8" O.D. x 12 gauge pre-galvanized structural steel tubing. Cross braces 1" O.D. x 16 gauge pre-galvanized structural steel tubing. Brace attachment points 1-1/2"x1-1/2"x3/16" steel angle. Seat and top mounting points 7 gauge x 1-1/2" die stamped steel flat bar. Legs are bent over a mandrel through the bend radius producing a wrinkle free bend. Holes are predrilled in legs for optional surface mounting. All electrically MIG welded.

Frame Coating: Electrostatic powder coated application oven cured.

Hardware: All stainless steel hardware fasteners.


Dimensions: 8' portable pincinc table walk-through desing. Top is 30" wide x 96" long x 30-13/16" high. Seats are 10" wide x 96" long x 18-13/16" high. Outisde to outside dimensions are 67-7/16" x 96".

1/10/2020 Page 3 of 8

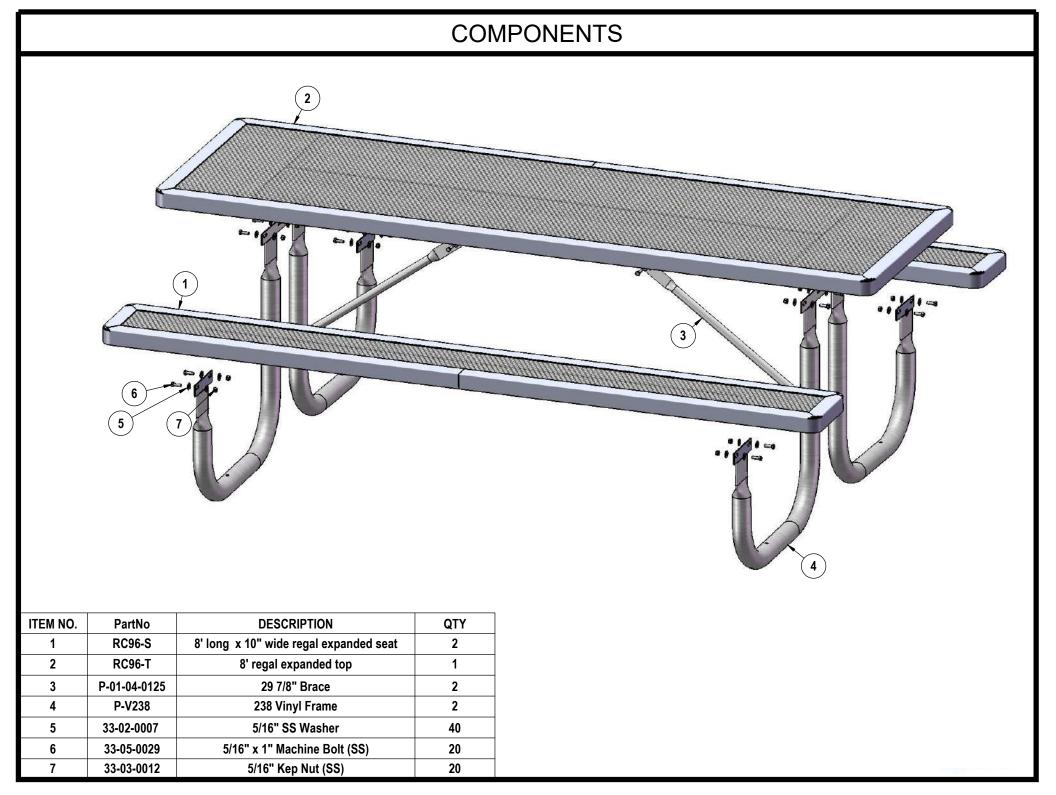

1/10/2020 Page 4 of 8


STEP 1

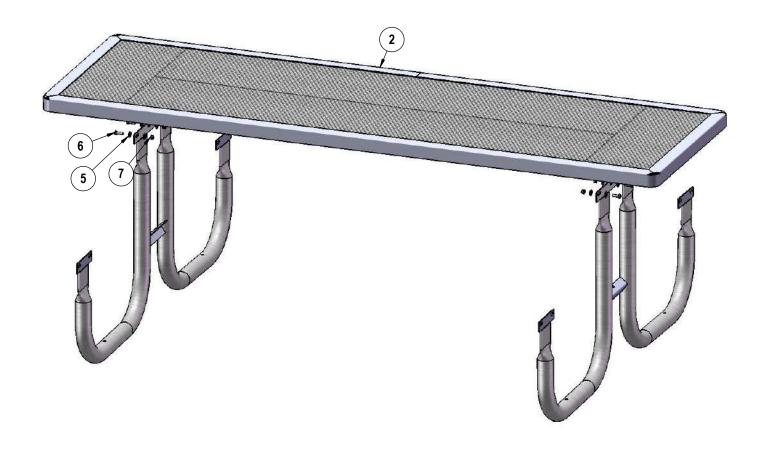

Attach the top to the top legs as shown using specified hardware.


1/10/2020 Page 5 of 8

STEP 2

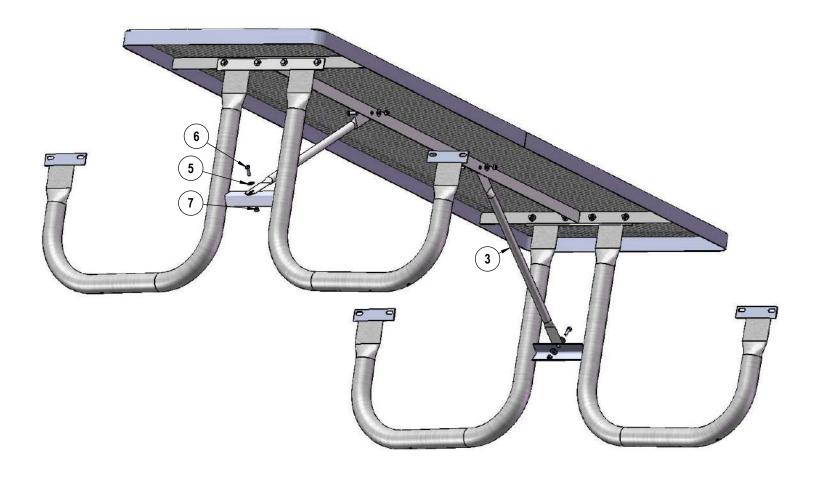


Attach the braces to the frame and under side of the top as shown using specified hardware.

1/10/2020 Page 6 of 8

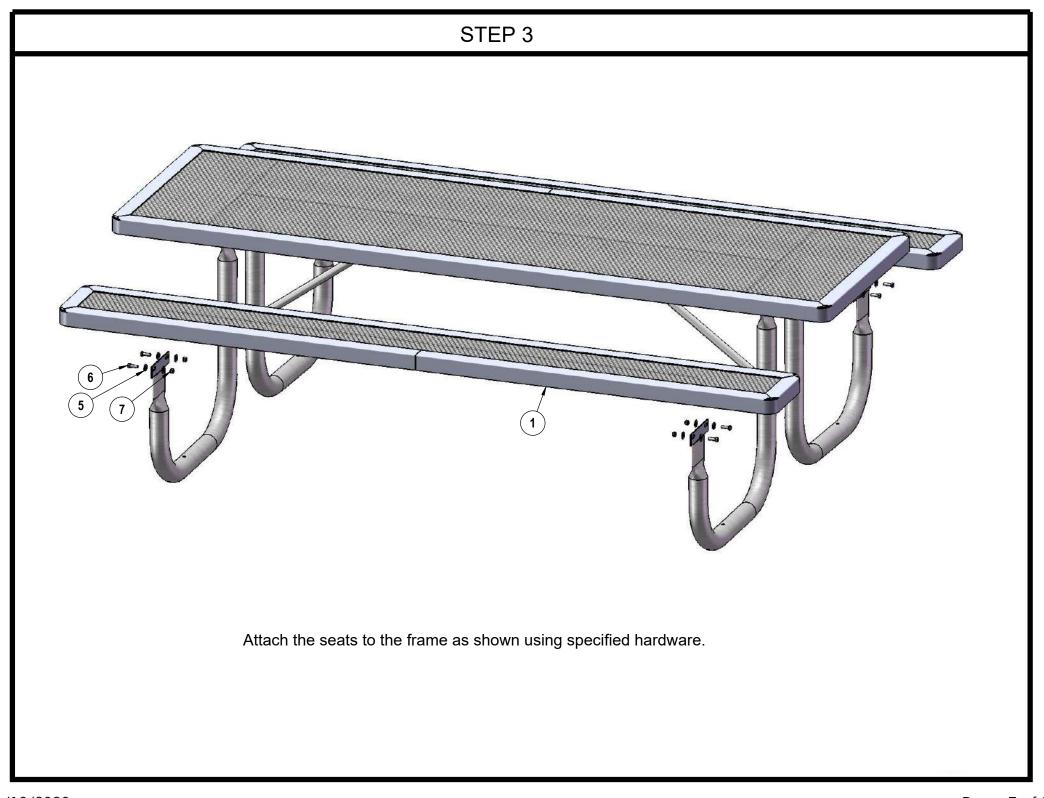

1/10/2020 Page 7 of 8

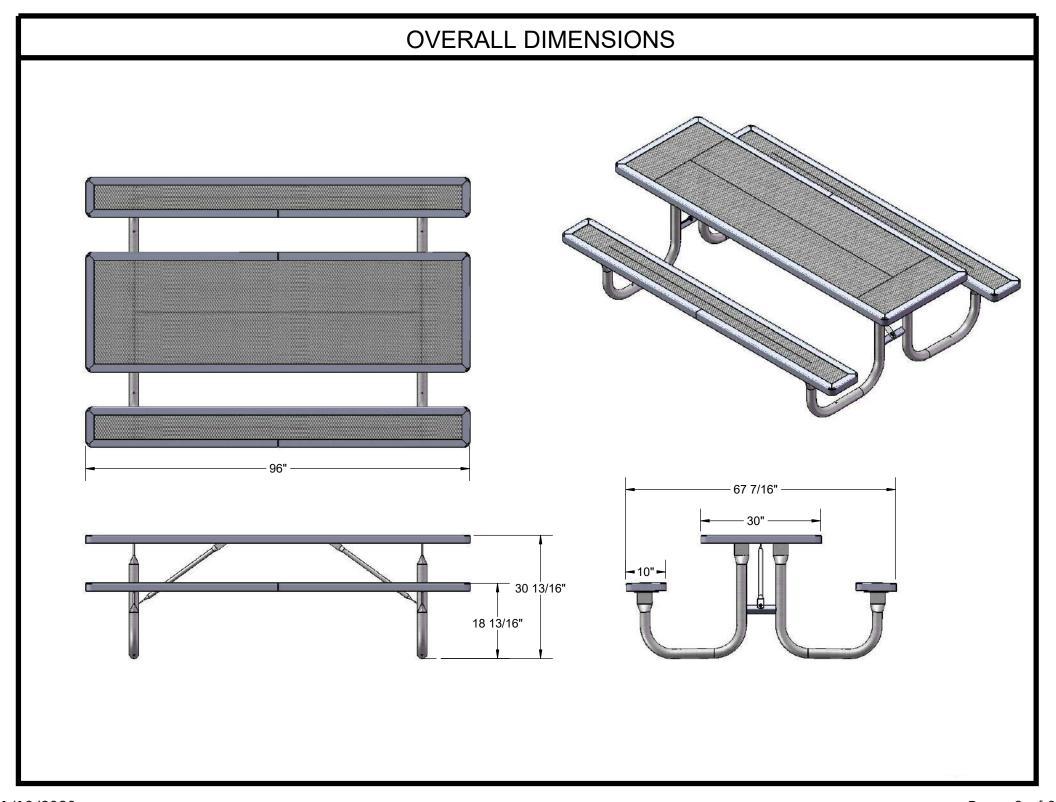

1/10/2020 Page 8 of 8